


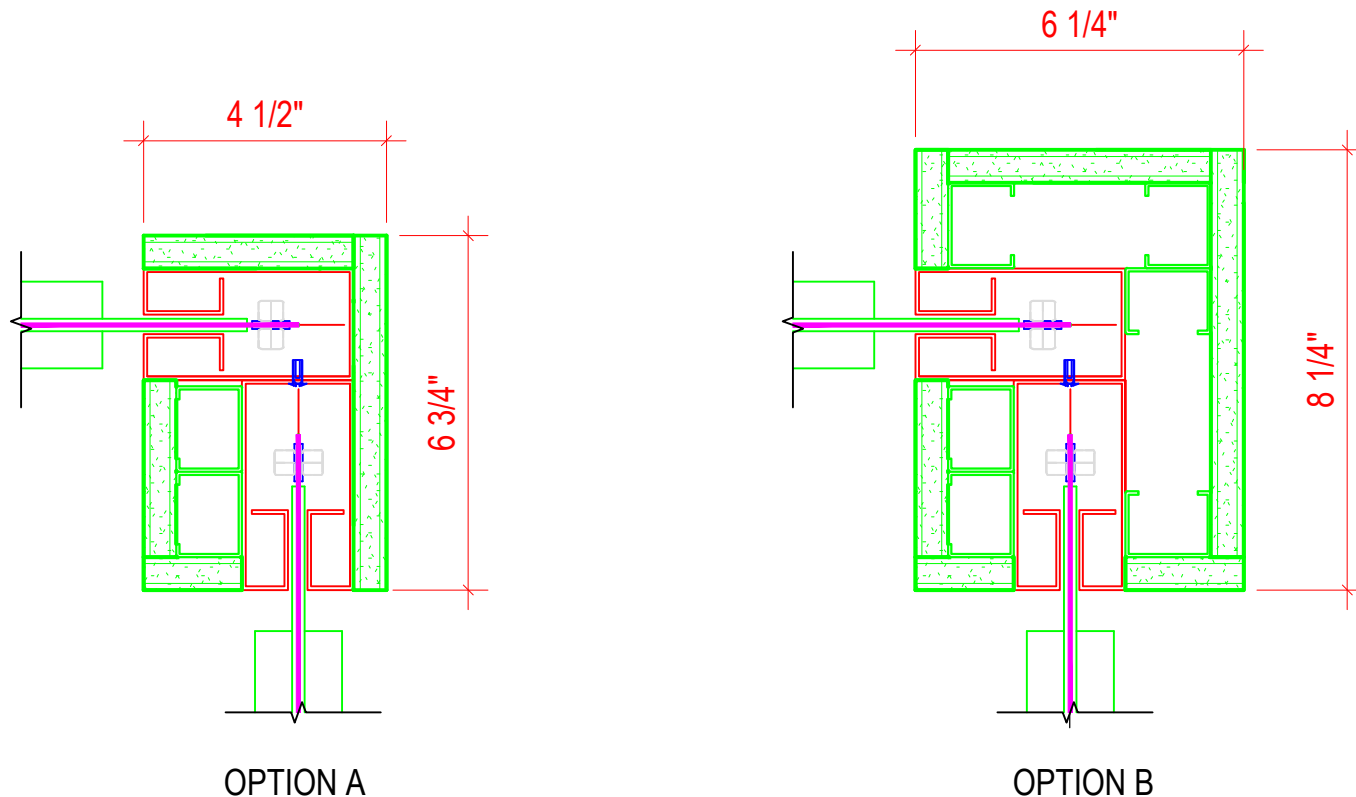

NOTE: AUXILIARY RAILS SECURED TO FLOOR USING BRACKETS. 1/4" GAP REQUIRED BETWEEN DRYWALL/FRAMING AND SIDE GUIDE. GAP CAN BE FILLED WITH CAULK.



U.S. SMOKE & FIRE®

#	REVISION	DATE	BY

Title: AUXILIARY RAIL
CORNER DETAILS

Scale: NTS
Date: mm/dd/yy